
SheetCam (settings for home)


These settings allow your home version of SheetCam (as of v.8.0) to more closely resemble DMS's version (v.7.0.16)





V 10.5.25

Options | Machine

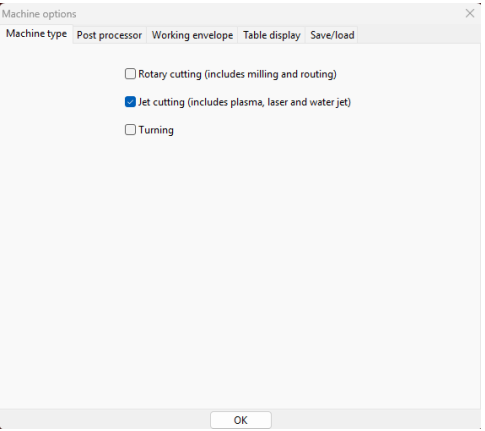


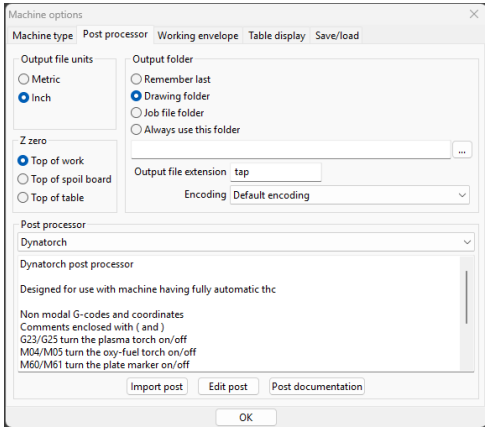


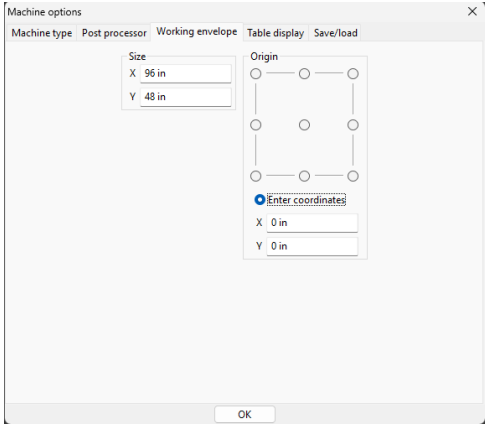


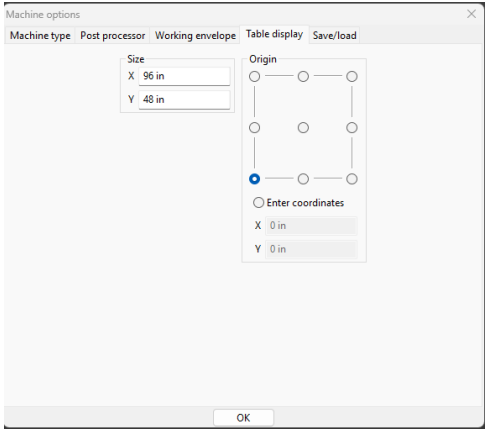



Options | Application Options

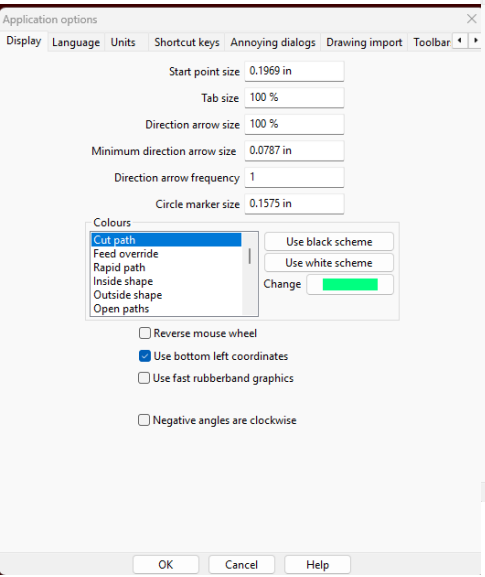

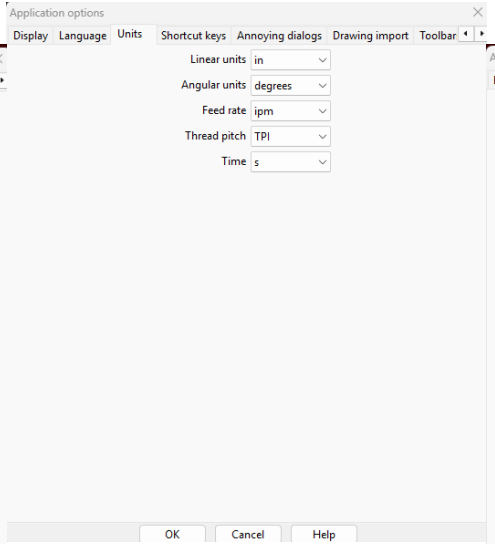


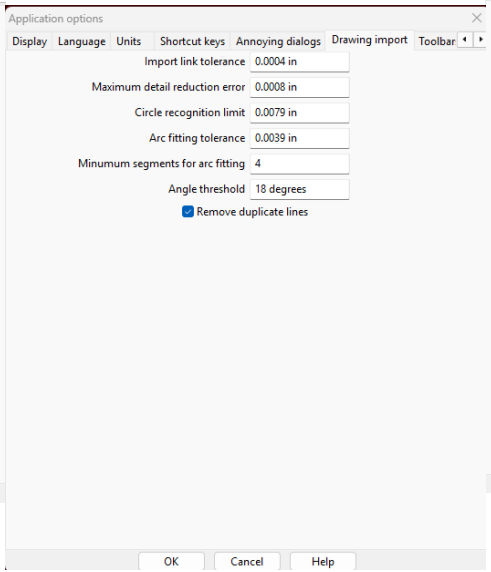

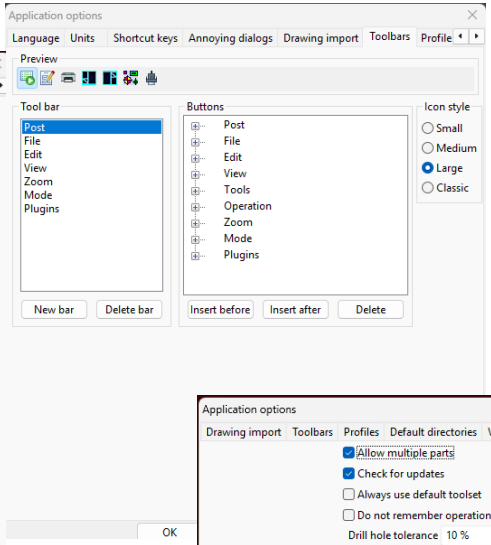

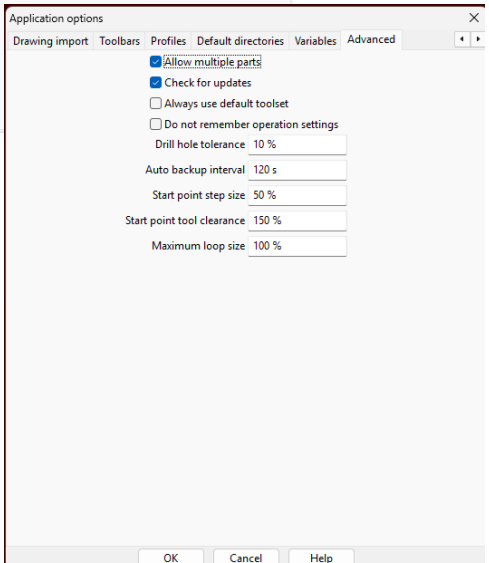

Options | Job

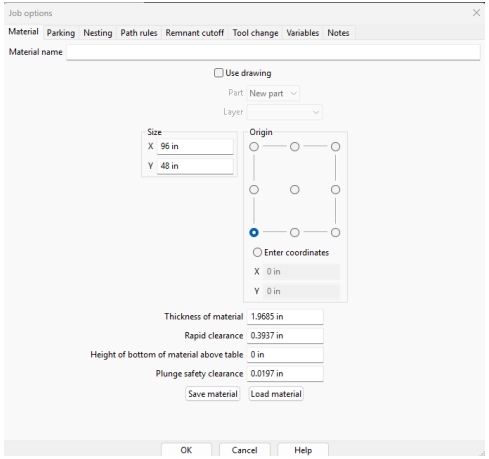
Job options
Material
Parking
Nesting
Path rules
Remnant cutoff
Tool change
Variables
Notes
Material name
Use drawing
Part
New part
Layer
Size
X 96 in
Y 48 in
Origin
Enter coordinates
X 0 in
Y 0 in
Thickness of material 1.9685 in
Rapid clearance 0.3937 in
Height of bottom of material above table 0 in
Plunge safety clearance 0.0197 in
Save material
Load material
OK
Cancel
Help

File | Import/Export Toolset | Import CSV

- This brings in the full set of ‘tools’, which are the various metal thickness & types. Select the included .csv file.

